

EXPLORER® 527

QUICK GUIDE

Start up

1. Connect the cable(s).
2. Press the power button in the left side of the front panel. The display and the green power indicator in the front panel light up when the EXPLORER 527 is on.
3. Enter the SIM PIN if required.
4. If required, select the satellite you want to use when connecting to the BGAN network.

NOTE: When the display shows READY, the terminal automatically activates the LAN interface if the cable is connected and the interface is enabled. If you are not going to use the LAN connection, remove the cable or disable the LAN interface to avoid being charged for any transmission through this interface.

You can now make a call or run a data session.

Voice call

To make a call from the EXPLORER 527, dial
00 <country code> <phone number> #.

Example: Thrane & Thrane A/S in Denmark:
00 45 39558800 #


NOTE: There are two audio qualities for voice: Standard voice and 3.1 kHz Audio.

To force the call to use Standard voice, dial **1*** before the number.

To force the call to use 3.1 kHz Audio, dial **2*** before the number.

To make a call to the EXPLORER 527, dial
+870 <mobile number>

NOTE: There are two mobile numbers for voice, one for 3.1 kHz Audio and one for Standard voice.

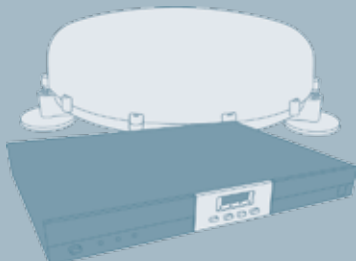

Fax call

To send a fax from the EXPLORER 527, dial
00 <country code> <phone number> #

Example: Thrane & Thrane A/S in Denmark:
00 45 39558888 #

NOTE: The audio quality must be set to 3.1 kHz Audio. To force 3.1 kHz Audio, dial **2*** before the number.

To send a fax to the EXPLORER 527, dial
+870 <mobile number>

Start/Stop Streaming on LAN

1. Enter the menu system and select **CONNECT**.
2. Select the Streaming Profile you want to activate on the LAN interface.
3. Select **START** or **STOP**.

NOTE: When running a Streaming session you are charged for the time you are connected. A started Streaming session will stay active until you stop it.

The Streaming Profiles must first be defined and activated in the LAN window of the web interface. Refer to the User Manual.

Accessing the web interface

1. Connect a PC to the EXPLORER 527.
2. Start your Internet browser.
3. Enter the IP address of the web interface in the address field. The default IP address is 192.168.0.1.
The IP address is found in the menu system, by selecting **PROPERTIES > TERMINAL > IP ADDRESS**.

Send SMS

1. In the web interface, select **MESSAGES > Write Message**
2. Type the message.

3. Type in the phone number as follows:

00 <country code> <phone number>.

4. Select **Delivery Notification Yes or No**.
5. Click **Send**.

Shortcuts in the menu system

To activate stealth mode, press **C + OK**.

To exit the menu system, press and hold **C** for one second.

DISPLAY MENUS

